



ASSEMBLY GUIDE














168390-0xx-00-xx

Railing base

EASY GLASS® SMART+ HIGH Y - Base shoe, fascia mount

For adjustable glass fixation

Q-INFO MOD 8390

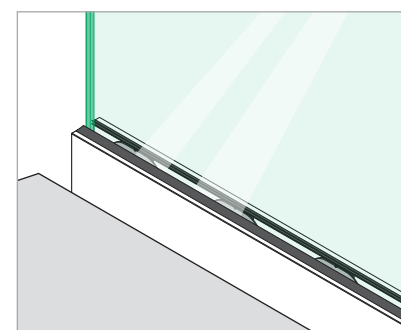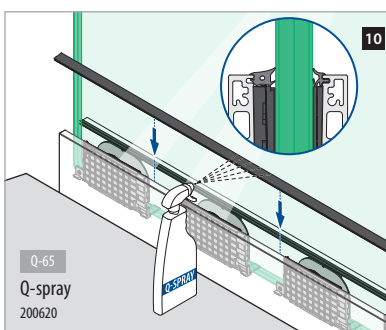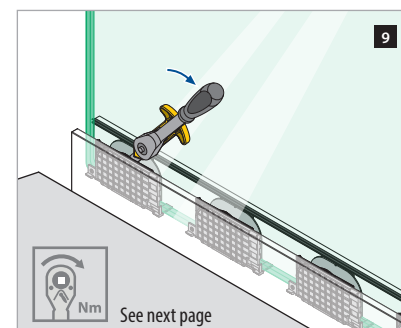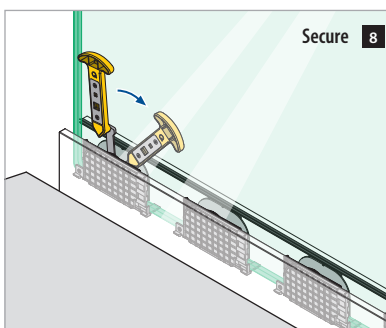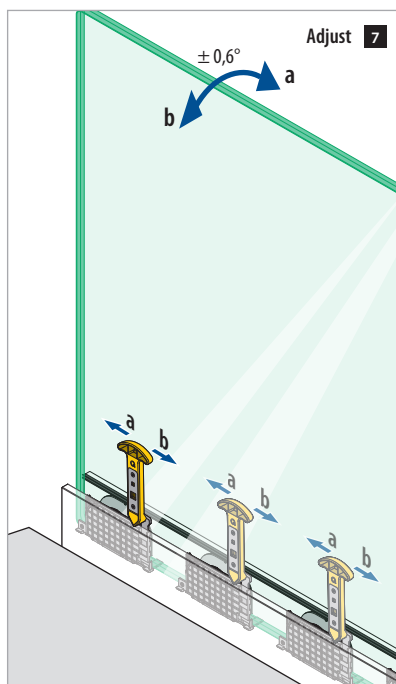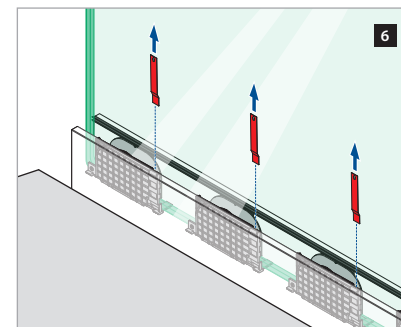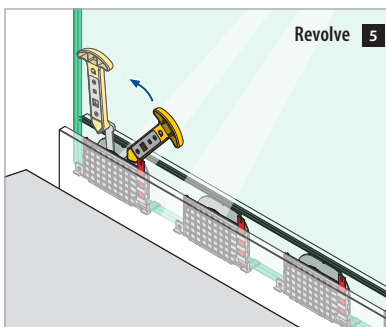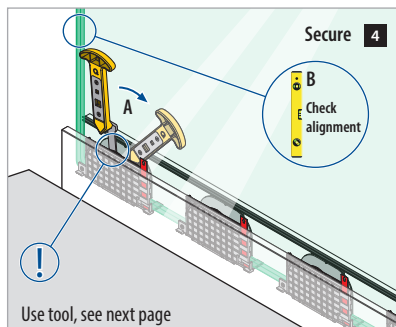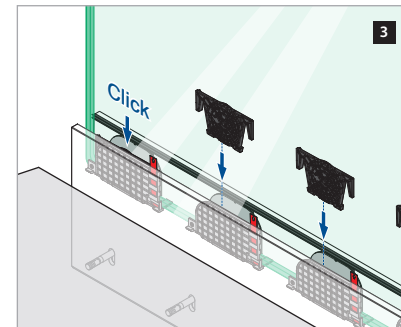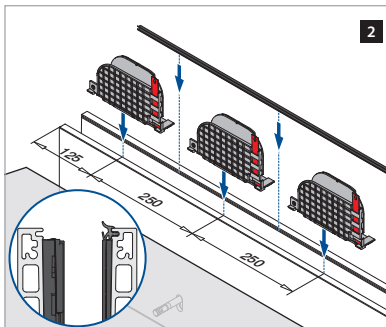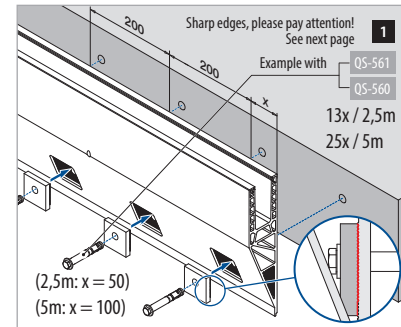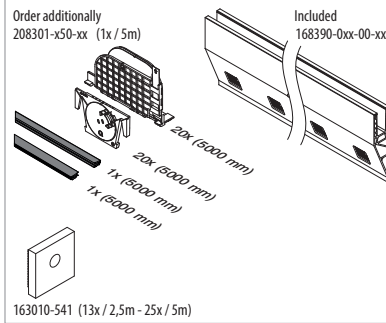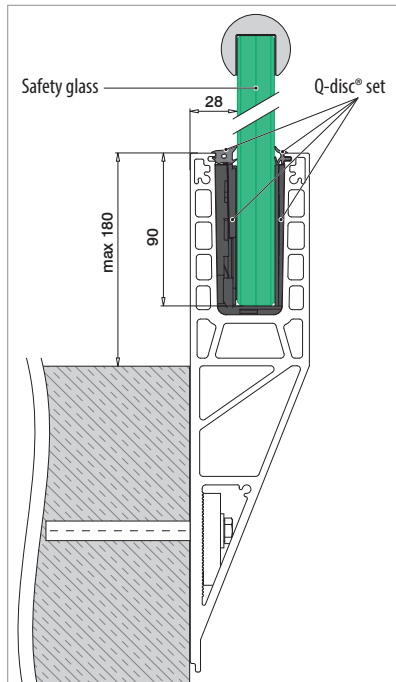




Q-disc® System


Q-disc and inlay tool

For adjustable glass fixation

Q-INFO MOD 8301 / 1000

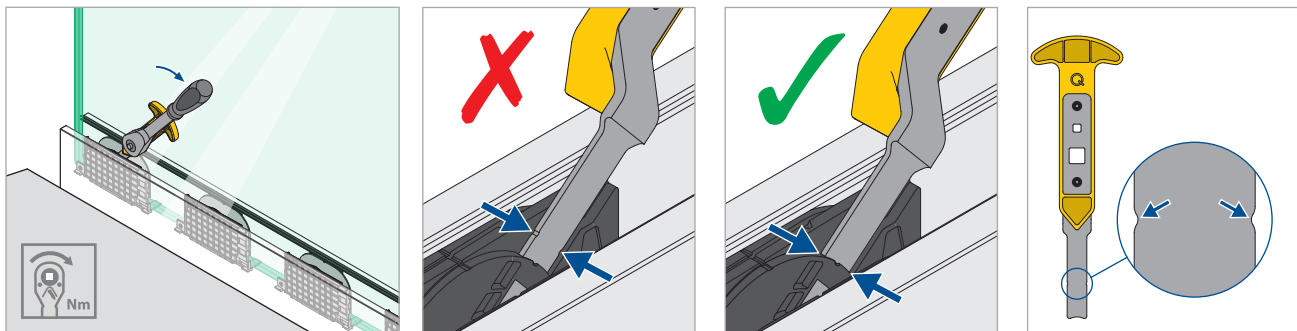

$T_{inst} \text{ (disk): } 32\text{Nm}$

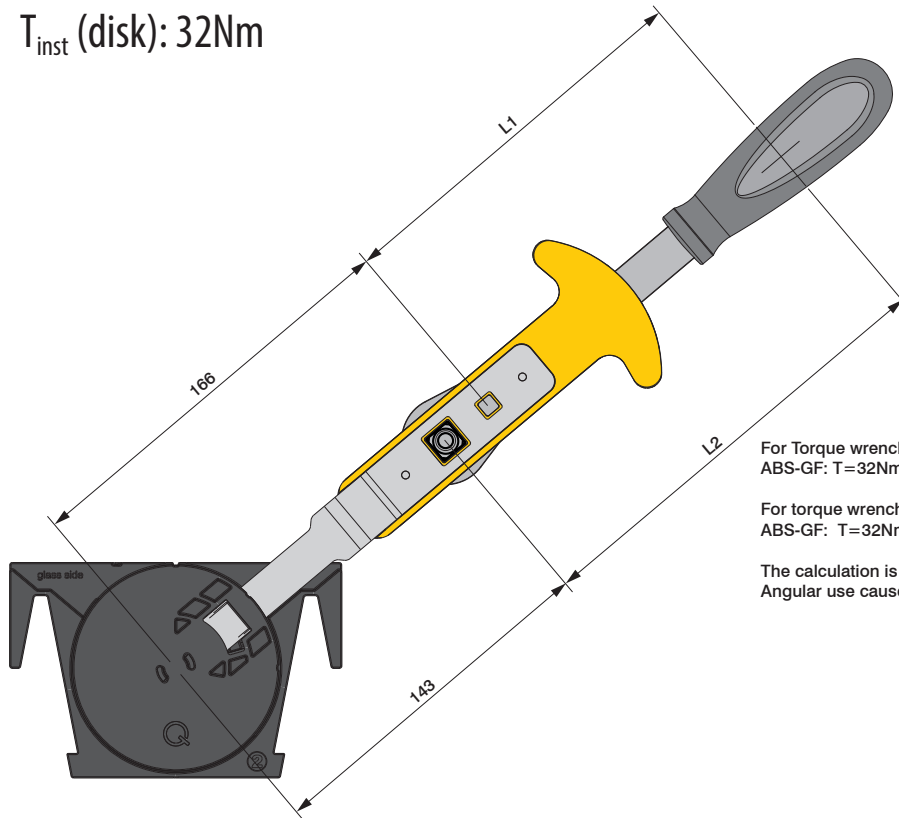

For Torque wrench 1/4":
ABS-GF: $T = 32\text{Nm} \cdot L1 / (L1 + 166\text{mm})$

For torque wrench 1/2":
ABS-GF: $T = 32\text{Nm} \cdot L2 / (L2 + 143\text{mm})$

The calculation is valid for straight-lined use.
Angular use causes different torque.

Q-INFO MOD 8390

